

# Bryant Connex Overview

## Main Screen Functions

1. Mode
2. Current room temperature
3. Set temperature
4. Settings Menu
5. Hold home at current temperature



## System Modes

To switch the mode, touch the “mode label in the top right of the thermostat

- Auto: Once you have set both a heat and cool set point, the system will automatically change modes to keep your home between the two temperatures.
- Heat: Uses primary heat source. If you have more than once heat source, you may see “Aux Heat” pop up on the screen if your secondary heat source is in use.
- Cool: Uses air conditioning source
- Fan Only: System operates fan only, no heating or cooling
- Off: No heating or cooling.

## Adjusting the temperature

To adjust the temperature up or down, simply tap arrows on the right hand side of the screen.

If you are in “Auto” mode, tap on the “Heat To” or “Cool To” before adjusting with the arrows.

## Fan Modes

To switch fan speed, touch the features button in the upper left screen and select “Fan” from the drop down menu.

Use the up and down arrows to select fan speed to low, medium or high. Note that these selections will only make the fan run continuously with the “continuous fan setting”